


INSTALLATION

- All traps must be fitted in the correctly allocated positions—see enclosed delivery schedule (if you are unsure of the trap's location please contact EBE Engineering Ltd)
- Traps may be fitted horizontally or vertically but should not discharge upwards
- All traps should be fitted in accordance with Health & Safety regulations and codes of practice for pressurised systems
- The pressure rating of the application must never exceed that of the trap
- EBE traps must be fitted with the flow arrow in the direction of flow (steam to condensate)
- Ensure that all debris, gasket material, anti-seize compound etc. is removed from the throat of the trap prior to installation
- If the trap is fitted with a filter, it should be inspected and cleaned after two weeks and then in accordance with your normal inspection regime

MAINTENANCE

EBE ECOFLOW Traps have no moving parts to wear out or fail therefore require minimal maintenance but it is advisable to:

- Perform temperature checks across traps after installation. EBE Engineering Ltd can assist you with this
- Carry out an annual inspection with periodic cleaning of strainers and trap bodies if necessary
- Use new gaskets every time a seal is broken

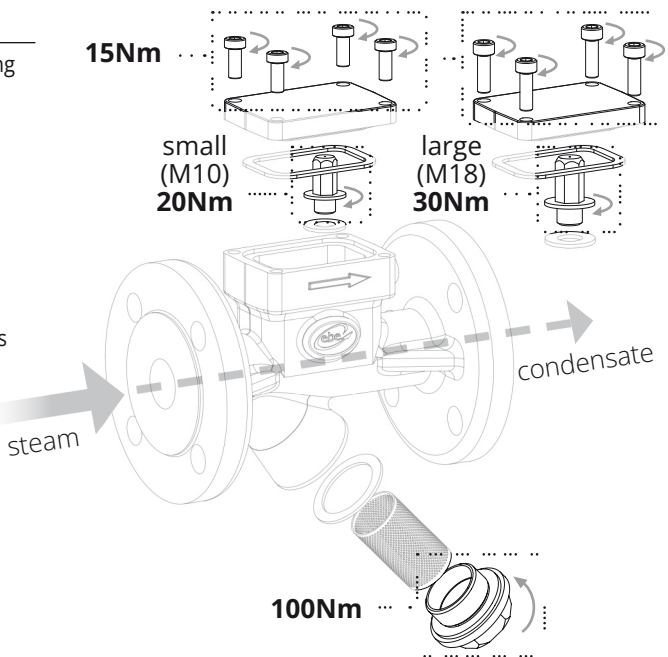

Note for Storeman:

Please keep these instructions with the traps until they have been installed

IMPORTANT

Torque settings - Please keep to the specified settings as above when checking or cleaning